


# THE EASIEST ACCESS TO THE INTERNET

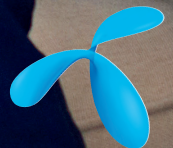


telenor

# CONGRATULATIONS ON YOUR TELENOR BROADBAND PACKAGE

## THE BOX CONTAINS THE FOLLOWING COMPONENTS

- A** 1 router with wireless network
- B** 1 telephone cable (grey)
- C** 1 network cable (yellow)
- D** 1 3-pin telephone plug adapter
- E** 1 power supply unit

## HOW TO CONNECT YOUR ROUTER

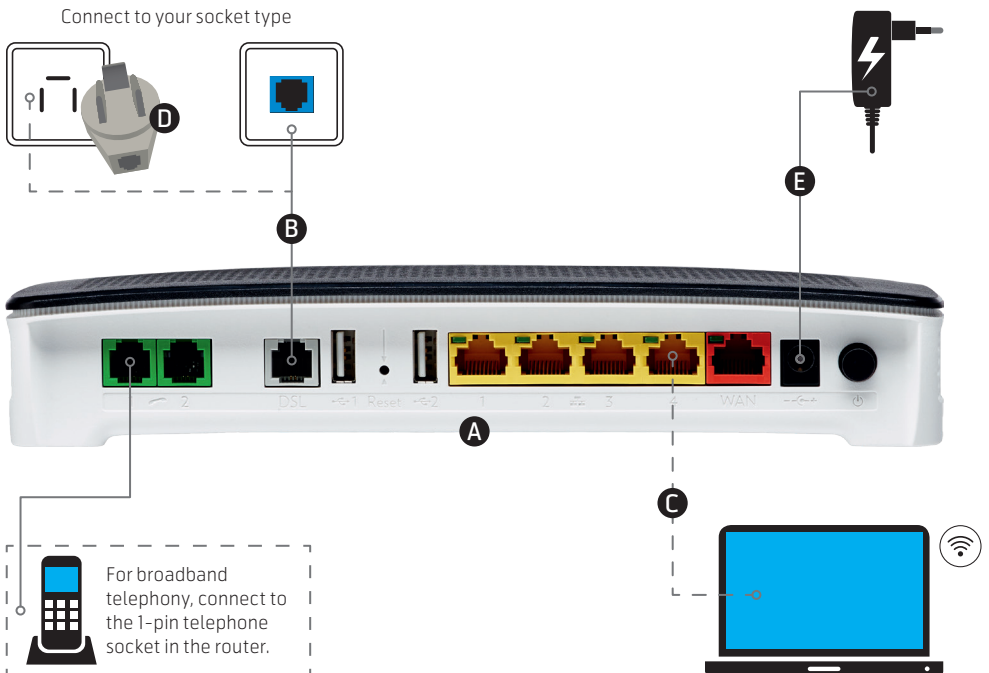

# 1-2-3 ONLINE!

- 1 Connect and switch on your router  
(follow the guide on the opposite page)
- 2 Switch on your computer
- 3 Set up wireless connection  
(follow the guide on the back page)

PLEASE NOTE THAT YOUR ROUTER WILL BE ONLINE BY 5.00 PM AT THE LATEST ON THE ACTIVATION DATE STATED IN THE LETTER YOU RECEIVED FROM TELNOR.

## IMPORTANT INFORMATION



For the best possible connection, you must **always connect your router to the master socket**. The master socket is usually the socket that is closest to the location where the cable comes in from outside. If you live in a multi-storey building, the master socket is usually the one closest to the stairs.



If you have a **3-pin telephone plug**, you will need the 3-pin adapter (D) included in the package. Plug the adapter into the master socket and then connect the telephone cable (B) to the adapter (D).



If you have a **traditional landline (PSTN)**, a splitter has been included in your package. Connect this between the main socket and the DSL input port on the router, i.e. from the main socket to the Line input port on the splitter and then from the DSL output port on the splitter to the DSL input port on the router. You will then need to plug your landline into the Phone output port on the splitter.



It is important to use **the power supply unit and cables** included in the package.



It may take **up to 15 minutes** after you have connected and switched on the router for the first time before it connects to the Internet. Remember to remove all equipment/telephones from all telephone sockets so they do not interfere with the Internet connection.



To get the **best WiFi signal**, place the router in as central a location as possible. Place it far away from sources of electrical interference such as TVs, refrigerators and microwaves.

# HOW TO CONNECT TO YOUR WIRELESS NETWORK (Wi-Fi)

- 1 Locate your **network name and wireless key**. Both are on the label on the back of the router.
- 2 **To connect to the Internet, locate the network** on your computer or tablet. It will ask you to enter the wireless key, which you will find on the back of the router. If there is an Ø in the wireless key, enter a zero (0) instead.

Network Name: TelenorXXXXXX  
Wireless Key: XXXXXXXXXX



For more help to set up your router, visit  
[www.telenor.dk/2010](http://www.telenor.dk/2010)



**CONTACT CUSTOMER SERVICE 24/7**

Private customers: 72 100 100  
Business customers: 72 120 100